 


24"x 36"W McKenzie Alder Bookcases: 29"- 48"H

Finished Program

 
Assembly Instructions

24" Wide

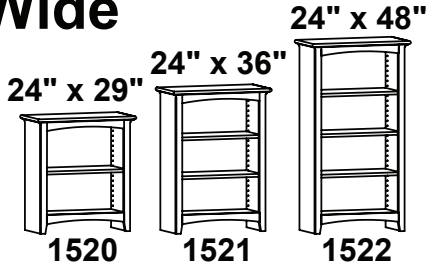


Model # 1520 1521 1522

30" Wide

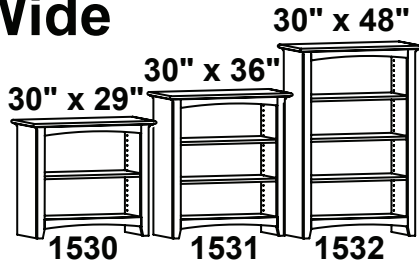

Model # 1530 1531 1532

 36" Wide

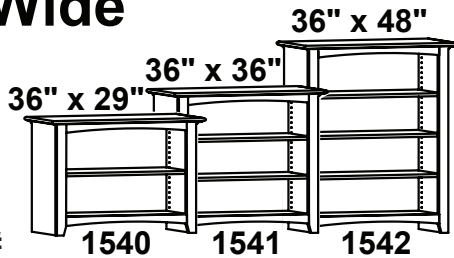

Model # 1540 1541 1542

IMPORTANT NOTES:

- This assembly requires two people.
- For normal household use only. *Not* recommended for commercial use.
- Do not climb, sit or stand on this piece of furniture.
- Do not overload the shelves.
- Unload items before you move this unit.
- Before you load or move this unit, tighten all screws and supports.
- Before you begin your project, completely read the Assembly Instructions.
- Periodically inspect your furniture for any loose glue joints, screws or any other problem that might affect the stability of your furniture. Tighten or repair as needed.

WARNING

Serious or fatal crushing injuries can occur from furniture tip-over. Use of tip-over restraints may only reduce but not eliminate the risk of tip-over.

To help prevent tip-over:

- Place heaviest items on the bottom shelves.
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on the top of this product.
- Never allow children to climb or hang on drawers, doors or shelves.

If you would like a tipping restraint kit Whittier will provide one free of charge. Please contact our Customer Service Department.

Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the state of California to cause cancer. Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection.

For more information go to: www.p65warnings.ca.gov/wood

This product can expose you to chemicals, including formaldehyde, which are known to the State of California to cause cancer.

For more information go to: www.p65warnings.ca.gov/furniture

DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.

Thank you for allowing us to help you furnish your home. We are certain you will be delighted with your new furniture for many years to come.

CUSTOMER SERVICE

If you ever have questions about your furniture, please do not hesitate to contact us. In the unlikely event you need a replacement part; we can make those parts available through an authorized Whittier Wood Furniture dealer. If you cannot order replacement parts through your dealer, please contact our customer service department.

Hours: Our friendly customer service staff can be reached:

Monday-Friday 8:00 a.m. to 5:00 p.m. (Pacific Time).

You may leave a message 24 hours a day, seven days a week.

Customer Service: 800-653-3336 • **Outside the U.S.:** 541-687-0213

Fax: 541-687-2060 • **Email:** info@whittierwood.com



P.O. Box 2827
Eugene, OR 97402 USA

Production Code:

McKenzie Alder Bookcase Program — Parts List

Before you begin to assemble this unit, identify each part and make sure the quantities received match what is on this list.

If you need to replace a part, please refer to the following list for the finish, part name and letter code.

Bookcase Finish

Please note the finish of the bookcase for replacement part orders.

Bookcase finish options are subject to change.

Stain








 
GAC Glazed Antique Cherry	CAF Caffè	FST Fieldstone	HAZ Hazelnut	NA Natural Alder
----------------------------------	------------------	-----------------------	---------------------	-------------------------

Paint

SN Snowbound SW 7004	AW Aged White SW 9180	SL Silverplate SW 7649	TB Tricorn Black SW 6258
-----------------------------	------------------------------	-------------------------------	---------------------------------


Two-Tone

SNN Snowbound SW 7004 Natural Alder	AWN Aged White SW 9180 Natural Alder	SLN Silverplate SW 7649 Natural Alder	TBN Tricorn Black SW 6258 Natural Alder
---	--	---	---

Part	Description	Quantity (by Model #)								
		1520	1521	1522	1530	1531	1532	1540	1541	1542
A	Adjustable Shelf (attached) 	1	2	3	1	2	3	1	2	3
B	Shelf Bracket (inserted) 	4	8	12	4	8	12	4	8	12
C	#6 x 1/2" Undercut Screw (inserted) 	4	8	12	4	8	12	4	8	12
D	Top Assembly (attached) 	1								
G	#8 x 1" Pan Head Screw (inserted) 	8						10		
H	Nylon Insert (inserted) 	4								
I	Small Adjustable Glide (installed) 	4								
J	#8 x 1-1/4" Pan Head Screw (inserted) 	13								

McKenzie Alder Bookcase Program Assembly Instructions

 Tools Required: Phillips Screwdriver, Rubber Mallet or Padded Hammer

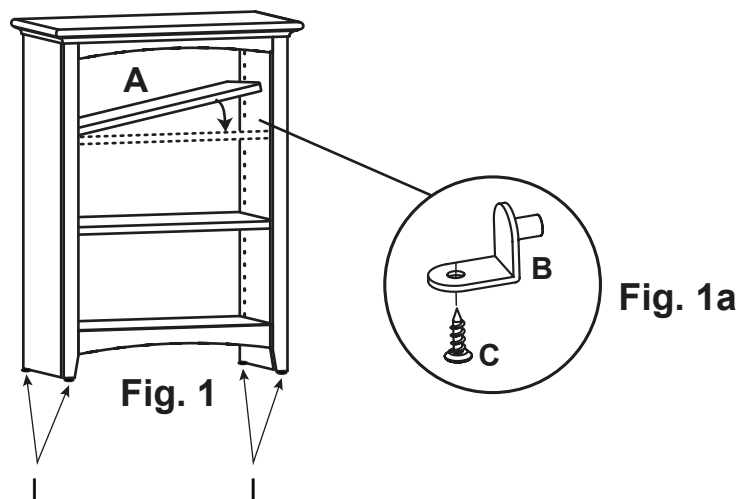

TO MOVE THE ADJUSTABLE SHELVES:

1. Determine where you want to place the Adjustable Shelves (A). Remove the #6 x 1/2" Undercut Screws (C) from the underside of the shelf and take out the Shelf and Shelf Brackets (B). Insert the Shelf Brackets (flat side down) into the four different holes and insert the shelf. See Figure 1. You may secure them by inserting #6 x 1/2" Undercut Screws (C). See Fig. 1a.
2. Place the bookcase in your desired location. Level the unit using the Adjustable Glides (I) located on the bottom of the unit. See Fig. 1.

