McKenzie Chest & Dressers

GAC = Glazed Antique Cherry finish

 
CAF = Caffè finish

FST = Fieldstone finish

Assembly Instructions
Model #



1127GACg 1127CAFg 1127FSTg McKenzie





1181GACg 1181CAFg 1181FSTg McKenzie

McKenzie 11-Drawer Chest



1128GACg 1128CAFg 1128FSTg McKenzie 10-Drawer Dresser



1182GACg 1182CAFg McKenzie 12-Drawer Dresser

Thank you for allowing us to help you furnish your home. We are certain you will be delighted with your new furniture for many years to come.

IMPORTANT NOTES:

- For normal household use only. Not recommended for commercial use.
- Do not climb, sit or stand on this piece of furniture.
- · Do not overload the drawers.
- · Unload items before you move this unit.
- This assembly requires two people.

A WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors or shelves.
- NEVER open more than one drawer at a time.
- DO NOT defeat or remove the drawer interlock system.
- · Place heaviest items in the lowest drawers.

Use of tipover restraints may only reduce, but not eliminate, the risk of tip over.

Attention: Attached to the bottom of or included with this unit is a tipping restraint kit. When you receive your furniture, be sure to find and install the tipping restraint as instructed in the kit. If you cannot locate the restraint, please contact us immediately for replacement.

Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the state of California to cause cancer. Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection.

For more information go to: www.p65warnings.ca.gov/wood

This product can expose you to chemicals, including formaldehyde, which are known to the State of California to cause cancer. For more information go to: www.p65warnings.ca.gov/furniture

DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.

CUSTOMER SERVICE

If you ever have questions about your furniture, please do not hesitate to contact us. In the unlikely event you need a replacement part; we can make those parts available through an authorized Whittier Wood Furniture dealer. If you cannot order replacement parts through your dealer, please contact our customer service department.

Hours: Our friendly customer service staff can be reached:
Monday-Friday 8:00 a.m. to 5:00 p.m. (Pacific Time).
You may leave a message 24 hours a day, seven days a week.

Customer Service: 800-653-3336 • Outside the U.S.: 541-687-0213

Fax: 541-687-2060 Email: info@whittierwood.com



Production Code:

VN 11/19

P.O. Box 2827
Lugene, OR 97402 USA

Parts List

Please identify the parts and check that quantities received match those on this list. If you need to replace a part, refer to the following letter and part name.

		Quantity			
Part	Description	1127GACg 1127CAFg 1127FSTg	1128GACg 1128CAFg 1128FSTg	1181CAFg 1181CAFg 1181FSTg	1182GACg 1182CAFg
Α	Top Assembly (attached)	1	1	1	1
Bg	Case	1	1	1	1
F	Small Drawer Box (inserted)	3	4	3	4
G	Medium Drawer Box (inserted)	4	4	4	4
Н	Large Drawer Box (inserted)	2	2	4	4
1	Small Drawer Face (attached)	3	4	3	4
J	Medium Drawer Face (attached)	4	4	4	4
K	Large Drawer Face (attached)	2	2	4	4
L	Knob (attached)	9	10	11	12
	#8 x 1-1/2" Machine Screw Tuscan				
Qf	(installed)	9	10	11	12
Tf	#8 x 7/8" Black Lo-Profile Screw (inserted)	48	52	60	64
	#8 x 1-1/4" Pan Head Screw				
U	(inserted)	21	26	21	26
	Small Adjustable Glide				
Υ	(installed)	4	4	4	4
	Adjustable Glide with Hex Nut				
YA	(installed)	1	1	1	1
YB	Assembled Foot (attached)	1	1	1	1
YC	5/16" x 3/4" Insert Nut (inserted)	1	1	1	1
YD	Anti-Tip Snapper (attached)	2	2	2	2
YE	Drawer Clip (attached)	4	4	4	4
Z	Drawer Slides (pre-installed sets)	9	10	11	12
ZB	#6 x 1/2" Philtruss Screw (inserted)	66	72	78	84
ZC	#6 x 3/4" Philtruss Screw (inserted)	60	66	72	78
ZT	#8 x 2" Black Screw (inserted)	2	2	2	2

Parts List

		Quantity			
Part	Description	1127GACg 1127CAFg 1127FSTg	1128GACg 1128CAFg 1128FSTg	1181CAFg 1181CAFg 1181FSTg	1182GACg 1182CAFg
ZU	M4 x 10mm Insert Nut (inserted)	8	8	0	0
	1/4" x 20mm Insert Nut				
ZV	(inserted)	4	4	4	4
	#8 x 1-1/8" Lo-Profile Screw				
ZW	(inserted)	4	4	4	4
	#8 x 1-3/8" Lo-Profile Screw				
ZX	(inserted)	9	10	9	10
TS	Furniture Tipping Restraint (attached)	1 set	1 set	1 set	1 set

Assembly Instructions

Tool Required: Phillips Screwdriver, Pencil.

- 1. This piece of furniture includes two drawer interlock systems, one controlling each vertical bank of drawers; this allows only one lower drawer in each bank to be open at a time. This safety feature reduces the risk of tip over. Do not defeat or remove the drawer interlock systems.
- 2. Place the unit at its final destination. Rotate the Small Adjustable Glides (Y) found at the corners of the unit and the Adjustable Glide with Hex Nut (YA) at the bottom of the Assembled Foot (YB) until the unit is level. See Figure 2.




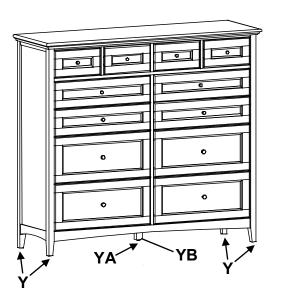


Fig. 2

3. If you need to remove your drawers, pull up on the left Drawer Release Lever while pushing down on the right Drawer Release Lever and pull out the drawer. See Figures 3 and 3a. Note where each drawer came from to make sure you place them back into their correct positions.

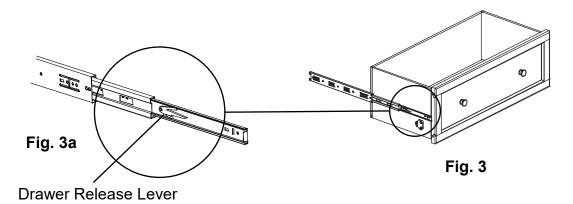

Assembly Instructions

4. When removing drawers from furniture featuring the Anti-Tip Drawer Interlock System it is important that the drawer be installed back in its original location. Numbers and letters are stamped on the back of the drawers. Stamping sequence starts at the bottom, moves to the top and designated left or right.

Drawer back stamping example:


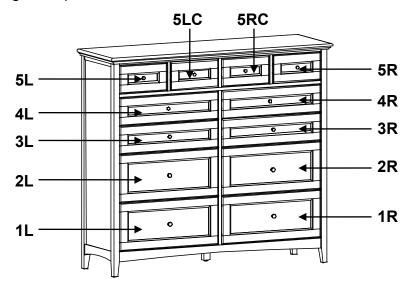



Fig. 4

Continued on Page 6

Assembly Instructions

5. Example; if you want to remove the First Drawer and Second Drawer from either side of the dresser; remove the Second Drawer first. When you remove this drawer the upper arm on the Anti-Tip Snapper for that side will be pulled forward. See Fig. 5d. As long as this arm is angled toward the front of the case, you cannot remove the First Drawer. Move the upper arms of the Anti-tip Snapper to the unlocked position as shown in Figure 5e. You can then remove the First Drawer as shown in Step 3. To reinstall the drawers, install the First Drawer then move the upper arm of the Anti-tip Snapper to the forward locked position. Now you can reinstall the Second Drawer.

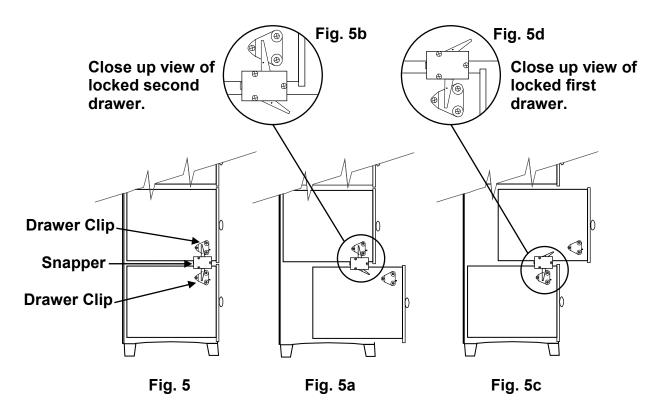

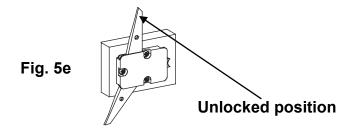

Assembly Instructions


Furniture Tipping Restraint Instructions Safety First! Anchor It!

Before you begin this assembly, identify each part and make sure the quantities received match what is on this list. If you need to replace a part, contact Whittier Wood Furniture customer service and refer to the following list for its name and letter code.

Part	Description		Quantity
Α	Cam Buckle and Short Strap (installed)		1
В	Plastic Bracket (installed)		1
С	1" x 1000mm Long Strap (installed)		1
D	#8 x 3" Pan Head Screw		2
Е	#10 x 1" Oval Head Screw (inserted)	Epinomia	1
F	Washer		1

If you have a stone or tile floor or do not wish to drive screws into the corner of the baseboard and floor see the instruction included inside the tipping restraint kit for an alternate installation.

6. Decide where you want to place the piece of furniture in your room. Mark the baseboard with a pencil mark directly behind the location where the tipping restraint is attached to your item. Move the item away from the wall far enough to allow you to access the spot where the baseboard meets the floor. Position the straps and Plastic Bracket (B) as shown in Figures 6 and 6a with the angled corners of the Plastic Bracket (B) firmly placed against the seam of the baseboard and floor. Attach by driving #8 x 3" Pan Head Screws (D) through the holes in the Plastic Bracket (B) into the seam below the baseboard where it meets the floor. See Figures 6 and 6a.

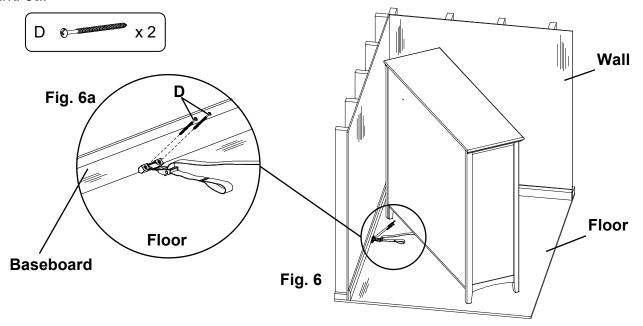

Assembly Instructions

7. Move the item back into position against the wall and reach underneath the piece of furniture to grasp the loop in the free end of the strap. Pull the free end of the strap until portion between the Cam Buckle (A) and the back apron of the item is tight. See Figures 7 and 7a. If you need to move the piece of furniture reach beneath and locate the buckle which connects the two sections of the strap and depress the release lever, then pull on the section of strap that is between the buckle and the back apron of the furniture until there is enough slack to allow you to pull the item away from the wall.

