

Model #

# 2139AST

## 70"W Ellison Dresser

AST = Astoria Sky finish  
*Assembly Instructions*



*Thank you for allowing us to help you furnish your home. We are certain you will be delighted with your new furniture for many years to come.*

### IMPORTANT NOTES:

- For normal household use only. *Not* recommended for commercial use.
- Do not climb, sit or stand on this piece of furniture.
- Do not overload the drawers.
- Unload items before you move this unit.
- This assembly requires two people.

### WARNING

Serious or fatal crushing injuries can occur from furniture tip-over. Use of tip-over restraints may only reduce but not eliminate the risk of tip-over.

**To help prevent tip-over:**

- Place heaviest items in the bottom drawers.
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product.
- Never allow children to climb or hang on drawers, doors or shelves.
- Never open more than one drawer at a time.
- Do not defeat or remove the drawer interlock system.

**Warning:** At least one tipping restraint kit was included with your piece of Whittier Wood Furniture. When you receive your furniture, be sure to find and properly install the tipping restraint(s). If you cannot locate the restraint(s), please contact us immediately for replacement.

Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the state of California to cause cancer. Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection.

For more information go to: [www.p65warnings.ca.gov/wood](http://www.p65warnings.ca.gov/wood)

This product can expose you to chemicals, including formaldehyde, which are known to the State of California to cause cancer.

For more information go to: [www.p65warnings.ca.gov/furniture](http://www.p65warnings.ca.gov/furniture)

**DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.**

## CUSTOMER SERVICE

If you ever have questions about your furniture, please do not hesitate to contact us. In the unlikely event you need a replacement part; we can make those parts available through an authorized Whittier Wood Furniture dealer. If you cannot order replacement parts through your dealer, please contact our customer service department.

**Hours:** Our friendly customer service staff can be reached:

**Monday-Friday 8:00 a.m. to 5:00 p.m. (Pacific Time).**

You may leave a message 24 hours a day, seven days a week.

**Customer Service: 800-653-3336 • Outside the U.S.: 541-687-0213**

**Fax: 541-687-2060 • Email: [info@whittierwood.com](mailto:info@whittierwood.com)**

**Whittier  
Wood**  
FURNITURE

P.O. Box 2827  
Eugene, OR 97402 USA

Production Code:


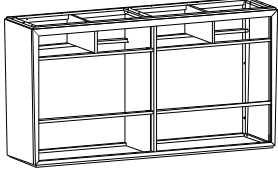 
 
 
 

 
 
 
 
 
 

 


 

VN

04/18

 

 


 
 
 
 


 






 
 
 
 
## 2139AST 70"W Ellison Dresser

### Parts List

Please identify the parts and check that quantities received match those on this list.  
If you need to replace a part, refer to the following letter and part name.

| Part | Description                            |   | Quantity |
|------|--|---|----------|
| A    | Top Assembly                           |    | 1        |
| B    | Case                                   |    | 1        |
| C    | Left/Right Small Drawer Box (inserted) |    | 3        |
| D    | Jewelry Drawer Box (inserted)          |    | 1        |
| E    | Medium Drawer Box (inserted)           |    | 4        |
| F    | Large Drawer Box (inserted)            |   | 2        |
| G    | Left Small Drawer Face (installed)     |  | 2        |
| H    | Right Small Drawer Face (installed)    |  | 2        |
| I    | Medium Drawer Face (installed)         |  | 4        |
| J    | Large Drawer Face (installed)          |  | 2        |
| K    | Tray (attached)                        |  | 1        |
| L    | Assembled Foot (attached)              |  | 1        |
| M    | Base (attached)                        |  | 1        |
| N    | Anti-Tip Snapper (attached)            |  | 2        |
| O    | Drawer Clip (attached)                 |  | 4        |
| P    | 16" Drawer Slides (pre-installed sets) |  | 10       |
| Q    | 14" Drawer Slides (pre-installed sets) |  | 1        |
| R    | #6 x 3/4" Philtruss Screw (inserted)   |  | 66       |

**2139AST 70"W Ellison Dresser**  
Parts List

| Part | Description  |   | Quantity |
|------|--|---|----------|
| S    | #6 x 3/4" Brass Flat Head Screw (inserted)                 |    | 20       |
| T    | #6 x 1/2" Philtruss Screw (inserted)                       |    | 84       |
| U    | Adjustable Glide with Hex Nut (installed)                  |    | 1        |
| V    | #8 x 1-1/8" Lo-Profile Screw (inserted)                    |    | 14       |
| W    | #8 x 1-3/8" Lo-Profile Screw (inserted)                    |    | 21       |
| X    | #8 x 1" Pan Head Screw (inserted)                          |    | 6        |
| Y    | #8 x 1-1/4" Pan Head Screw (inserted)                      |    | 16       |
| ZA   | #8 x 7/8" Black Lo-Profile Screw (inserted)                |    | 88       |
| ZB   | #8 x 1-3/4" Pan Head Screw (inserted)                      |    | 16       |
| ZC   | #8 x 1-1/4" Black Screw (inserted)                         |    | 7        |
| ZD   | #8 x 1-5/8" Black Screw (inserted)                         |    | 8        |
| ZE   | #8 x 2" Black Screw (inserted)                             |    | 2        |
| ZF   | #8 x 1-5/8" Machine Screw Tuscan (installed)               |   | 32       |
| ZG   | 5/16" x 3/4" Insert Nut (inserted)                         |  | 1        |
| ZH   | 1/4" x 20mm Insert Nut (inserted)                          |  | 4        |
| ZI   | 4 x 10mm Insert Nut (inserted)                             |  | 8        |
| ZJ   | Velvet Secret storage drawer bottom 385 x 355mm (attached) |  | 1        |
| ZK   | Velvet Tray bottom 368 x 308mm (attached)                  |  | 1        |
| ZL   | Antique Pewter Pull (attached)                             |  | 16       |
| ZM   | Front 4-Hole Bracket (attached)                            |  | 2        |
| ZN   | Back 6-Hole Bracket (attached)                             |  | 2        |
| ZO   | Small Adjustable Glide (installed)                         |  | 4        |
| TS   | Furniture Tipping Restraint (attached)                     |   | 1 set    |

# 2139AST 70"W Ellison Dresser

## Assembly Instructions

**Tools Required: Phillips Screwdriver, Pencil, Optional ½" wrench.**

1. Remove screws from the plywood supports and side aprons. Recycle or discard. See Figure 1.

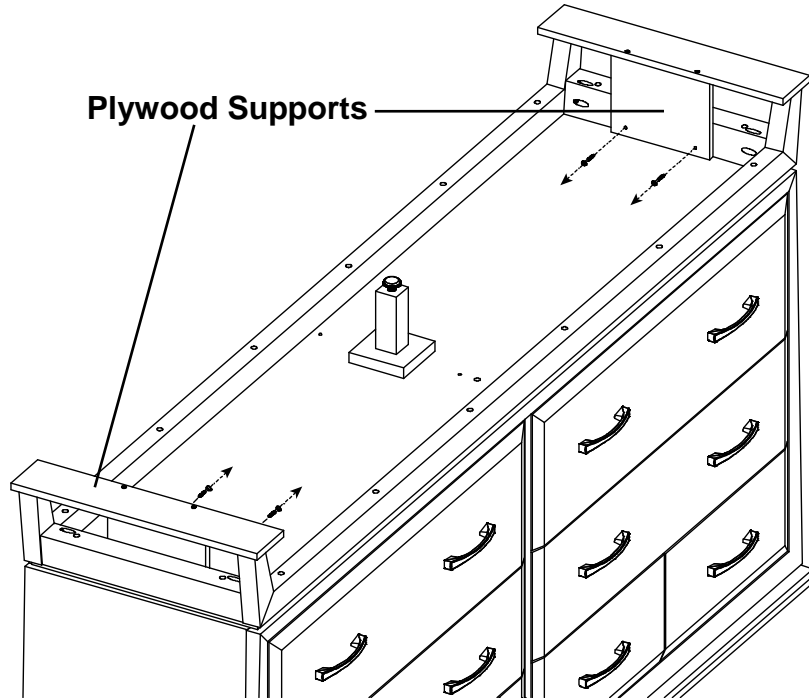 


Fig. 1

2. The dresser includes jewelry storage in the top drawer D. To access the lower jewelry storage area of this drawer slide upper section back into the case. See Figures 2 and 2a.

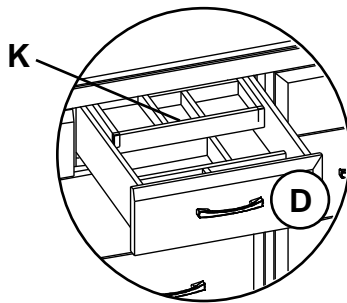 


Fig. 2a

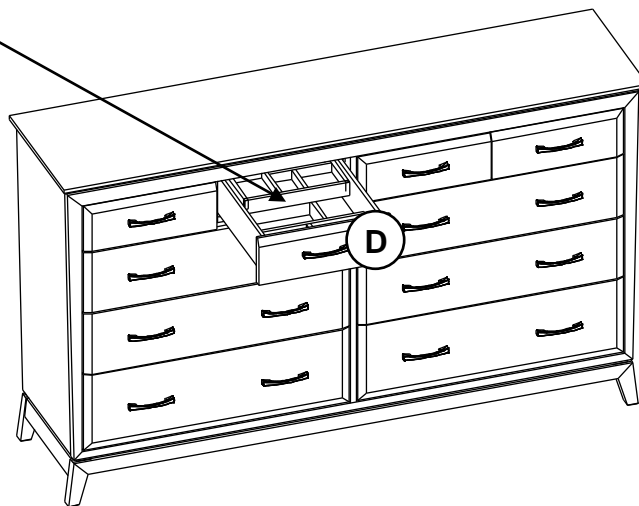 


Fig. 2

# 2139AST 70"W Ellison Dresser

## Assembly Instructions

3. This piece of furniture includes two drawer interlock systems, one controlling each vertical bank of drawers; this allows only one lower drawer in each bank to be open at a time. This safety feature reduces the risk of tip over. Do not defeat or remove the drawer interlock systems.
4. Place the unit at its final destination. Rotate the Small Adjustable Glides (ZO) found at the corners of the unit and the Adjustable Glide with Hex Nut (U) at the bottom of the Assembled Foot (L) until the unit is level. See Figure 4.

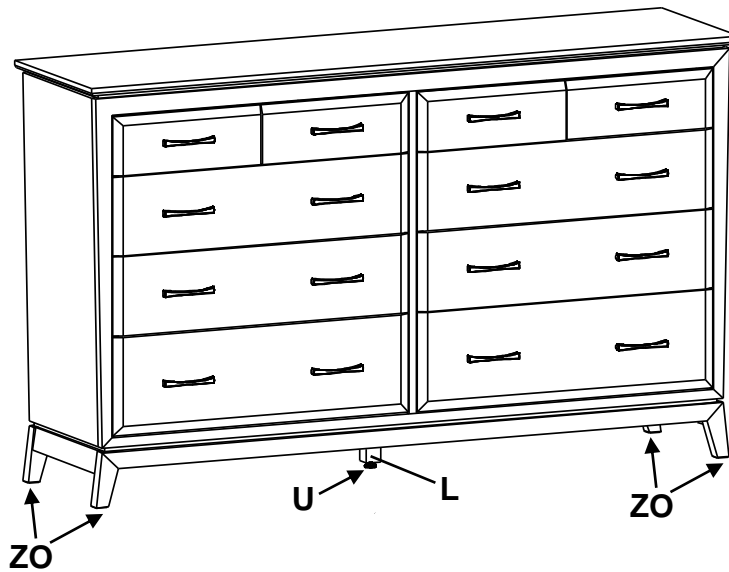 


Fig. 4

5. If you need to remove your drawers, pull up on the left Drawer Release Lever while pushing down on the right Drawer Release Lever and pull out the drawer. See Figures 5 and 5a. Note where each drawer came from to make sure you place them back into their correct positions.

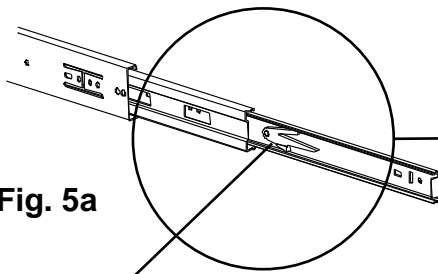 


Fig. 5a

Drawer Release Lever

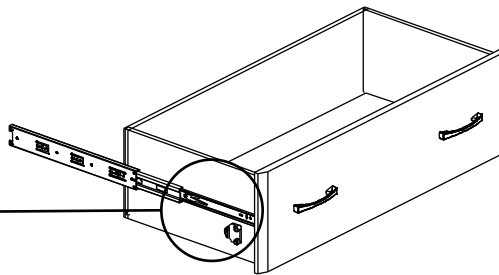 


Fig. 5

# 2139AST 70"W Ellison Dresser

## Assembly Instructions

---

6. When removing drawers from furniture featuring the Anti-Tip Drawer Interlock System it is important that the drawer be installed back in its original location. Numbers and letters are stamped on the back of the drawers. Stamping sequence starts at the bottom, moves to the top and designated left or right.

Drawer back stamping example:

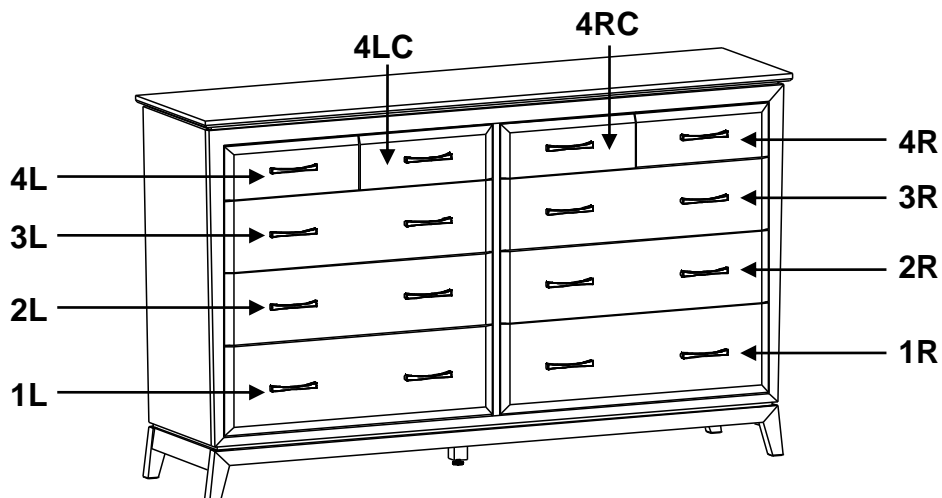 


 
Fig. 6

Continued on Page 7

# 2139AST 70"W Ellison Dresser

## Assembly Instructions

7. Example; if you want to remove the First Drawer and Second Drawer from either side of the dresser; remove the Second Drawer first. When you remove this drawer the upper arm on the Anti-Tip Snapper for that side will be pulled forward. See Fig. 7d. As long as this arm is angled toward the front of the case, you cannot remove the First Drawer. Move the upper arms of the Anti-tip Snapper to the unlocked position as shown in Figure 7e. You can then remove the First Drawer as shown in Step 5. To reinstall the drawers, install the First Drawer then move the upper arm of the Anti-tip Snapper to the forward locked position. Now you can reinstall the Second Drawer.

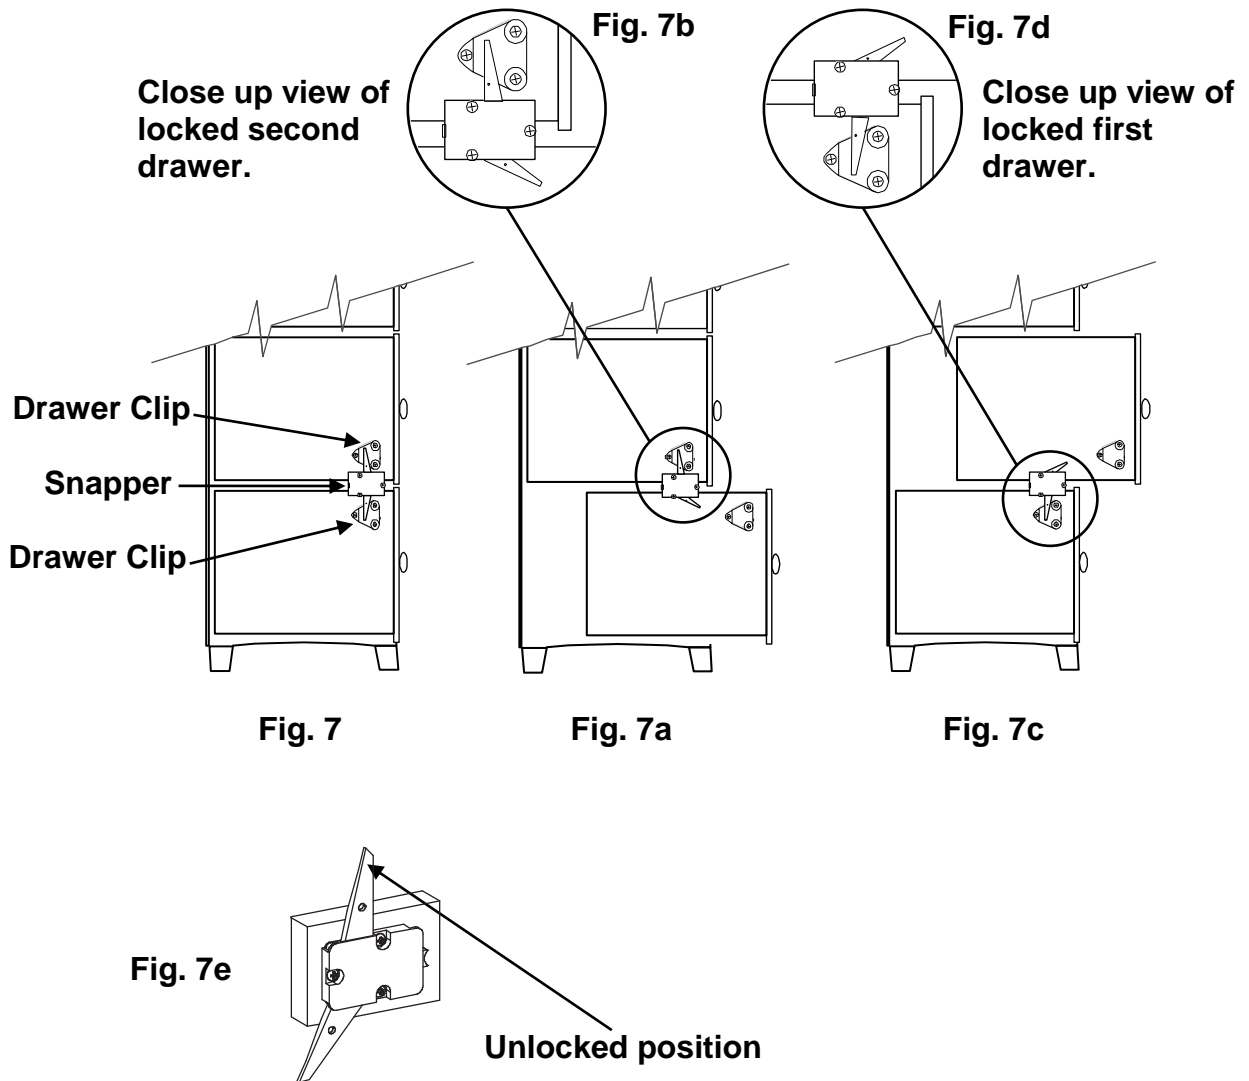

**2139AST 70"W Ellison Dresser**  
*Assembly Instructions*

 
## Furniture Tipping Restraint Instructions

Before you begin this assembly, identify each part and make sure the quantities received match what is on this list. If you need to replace a part, contact Whittier Wood Furniture customer service and refer to the following list for its name and letter code.

| Part | Description                            | Quantity |
|------|--|----------|
| A    | Cam Buckle and Short Strap (installed) | 1        |
| B    | Plastic Bracket (installed)            | 1        |
| C    | 1" x 1000mm Long Strap (installed)     | 1        |
| D    | #8 x 3" Pan Head Screw                 | 2        |
| E    | #10 x 1" Oval Head Screw (inserted)    | 1        |
| F    | Washer                                 | 1        |

**If you have a stone or tile floor or do not wish to drive screws into the corner of the baseboard and floor see the instruction included inside the tipping restraint kit for an alternate installation.**

- Decide where you want to place the piece of furniture in your room. Mark the baseboard with a pencil mark directly behind the location where the tipping restraint is attached to your item. Move the item away from the wall far enough to allow you to access the spot where the baseboard meets the floor. Position the straps and Plastic Bracket (B) as shown in Figures 8 and 8a with the angled corners of the Plastic Bracket (B) firmly placed against the seam of the baseboard and floor. Attach by driving #8 x 3" Pan Head Screws (D) through the holes in the Plastic Bracket (B) into the seam below the baseboard where it meets the floor. See Figures 8 and 8a.

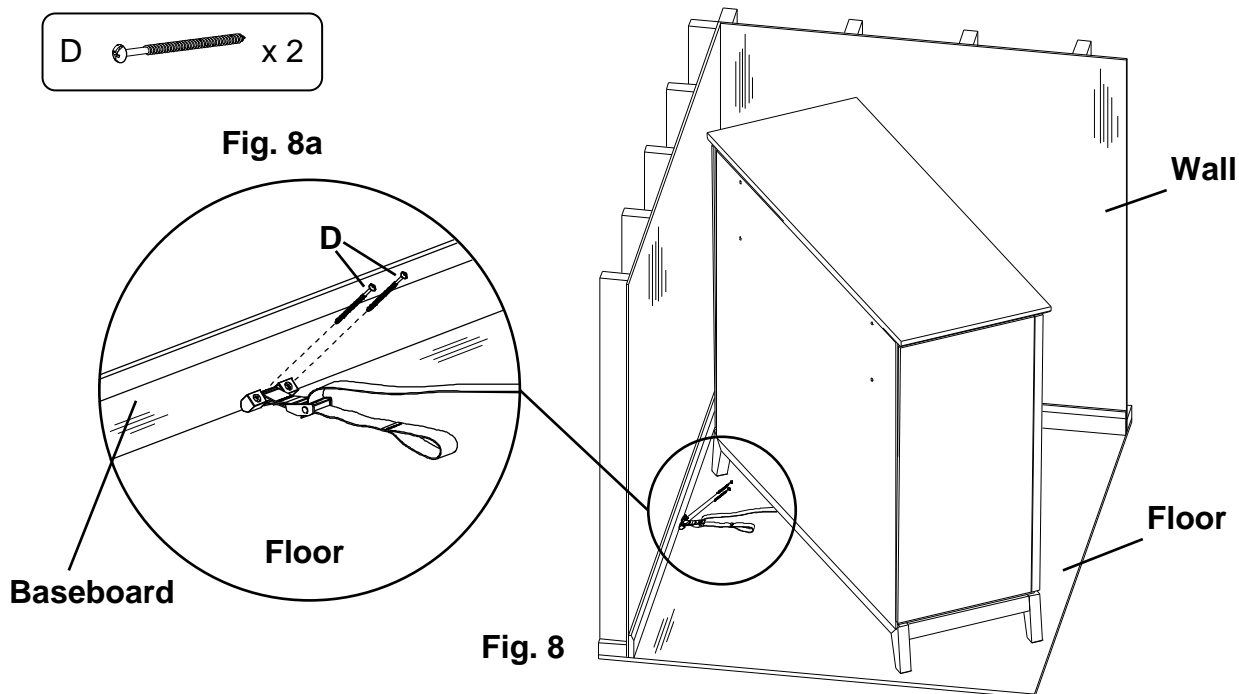



# 2139AST 70"W Ellison Dresser

## Assembly Instructions

9. Move the item back into position against the wall and reach underneath the piece of furniture to grasp the loop in the free end of the strap. Pull the free end of the strap until portion between the Cam Buckle (A) and the back apron of the item is tight. See Figures 9 and 9a. If you need to move the piece of furniture reach beneath and locate the buckle which connects the two sections of the strap and depress the release lever, then pull on the section of strap that is between the buckle and the back apron of the furniture until there is enough slack to allow you to pull the item away from the wall.

