


MOE'S

home collection

ASSEMBLY INSTRUCTIONS.

REED SIDEBOARD NATURAL



BZ-1108-24

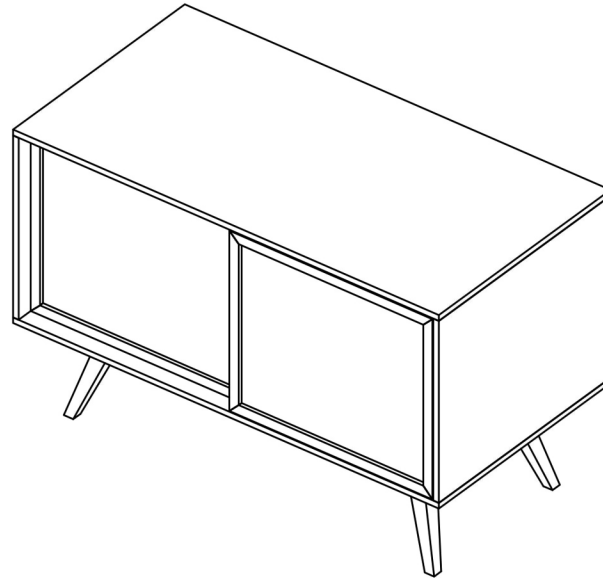




THANK YOU FOR YOUR PURCHASE!

PARTS & HARDWARE.

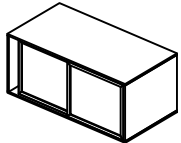PART LIST

| NO. | DESCRIPTION | IMAGE | Qty |
|-----|-------------|---|-----|
| A. | SIDEBOARD |  | 1 |
| B. | LEG |  | 4 |

HARDWARE LIST


| | | | |
|----|-------------------------|--|---|
| C. | Allen Bolt 6 x 16 mm |  | 4 |
| D. | Flat Washer 8mm |  | 4 |
| E. | Allen Key 4mm |  | 1 |

NOTES.


Thank you for purchasing this quality product!
Be sure to check all packing material carefully
for small part that May have come loose inside
the carton during shipping.

CAUTION: The Item is heavy, assembly
should be performed by two people.


STEP 1.

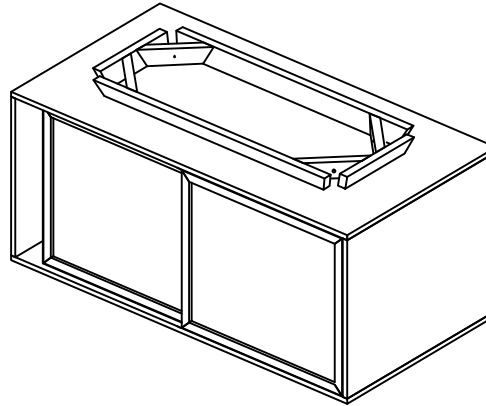

STEP 2.

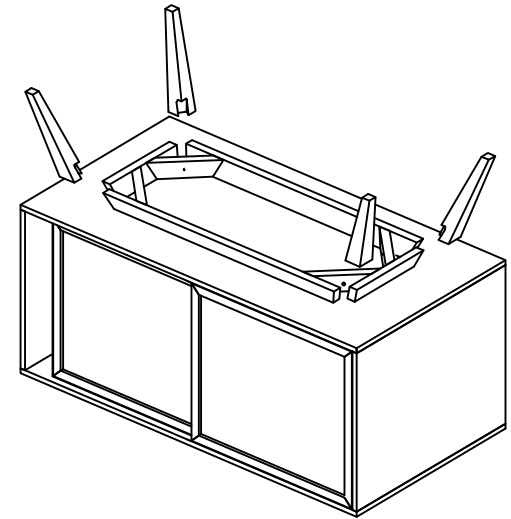

STEP 3.

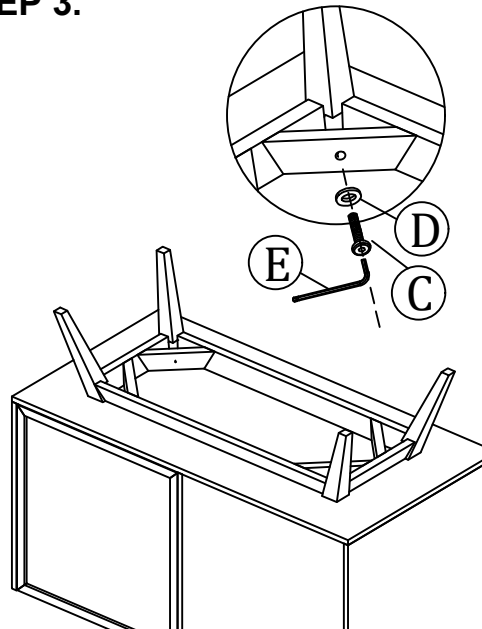

STEP 4.

