



Assembly Instructions

BIFOLD FUTON FRAME CAPRI ARM

See below for Preparation of arms for assembly.

1002

1 One pair of Bifold Arms

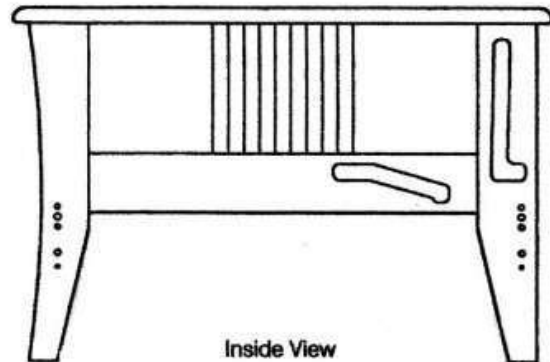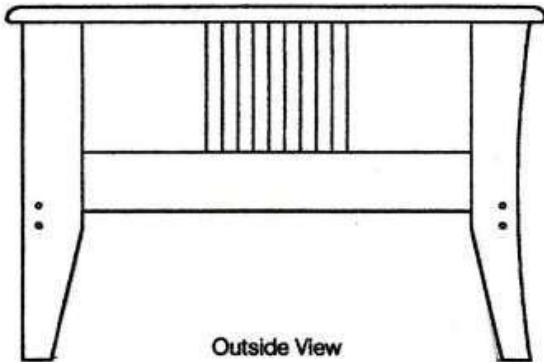

2 Hardware in this box



60mm Bolts x 8 Pieces
For the Front & Back Leg




Barrel Nuts x 8 Pieces




Wooden Dowel
x 4 Pieces



16mm Bolts x 4 Pieces
For the Stretcher Brackets

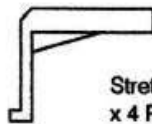


Stretcher Bracket
x 4 Pieces

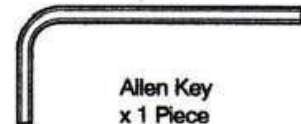

Allen Key
x 1 Piece


3 Fasten Stretcher Brackets to Arm

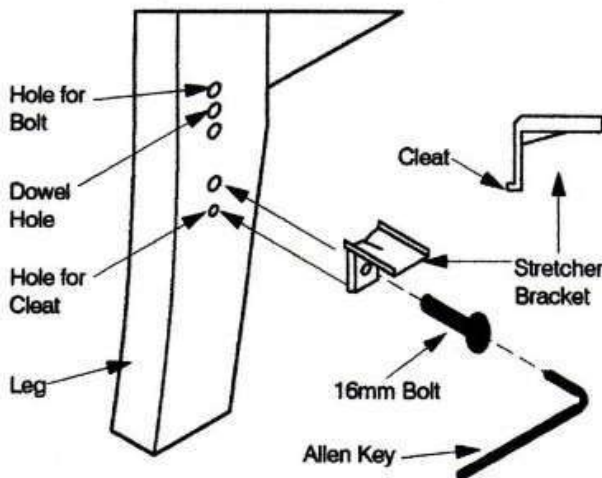

- Insert the Stretcher Bracket Cleat into the hole provided.
- IMPORTANT:** Don't fully tighten Bracket until Stretcher are all in place for easy alignment.
- Each arm requires two brackets, front and back.

4 Fit Wooden Dowels

Tap Wooden Dowels all the way into the middle hole before assembly to Arms.

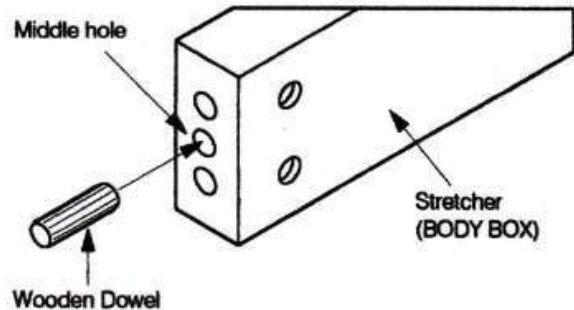

5 Assemble the Bifold Body

BODY INSTRUCTIONS:

Instructions for assembly of the Arms to the Bifold Body are packed in the Bifold Body box.